





Content

1	RESOLVED ISSUES	3
1.1	Room	3



1 Resolved issues

1.1 Room

Thermal bridge calculation values erased after using the Save, Calculate and Update Text function

Using the Save, Calculate and Update Texts function erased all user-defined Thermal conduction values resetting the values to '0'.

Total thermal bridge length sometimes calculated incorrectly depending on spaces above

The total length of thermal bridges for a room was calculated incorrectly if the same area in the storey above it had more than one space. The total thermal bridge length for a room was calculated as many times as there were spaces above it and all values were summed together.