

---

User's Guide

**MagiCAD<sup>®</sup>**

# **LK Systems Template Instructions**

Document revision 2012-11-13

MagiCAD® Copyright © 1998-2012 Progman Oy. All rights reserved.

MagiCAD is a registered trademark of Progman Oy.

AutoCAD is a registered trademark of Autodesk Inc.

Windows is a registered trademark of Microsoft Corporation.


All other product names are trademarks of their respective holders.

**PROGMAN OY**  
*[www.progman.fi](http://www.progman.fi)*


# LK Systems template

## Taking the template into use


1. Download the .zip file to your computer. Unzip the file to a suitable location.
2. Start MagiCAD, open the project management window, and choose *Pipe series* from the left part of the window.
3. Click the right button of your mouse and choose *Manager*.

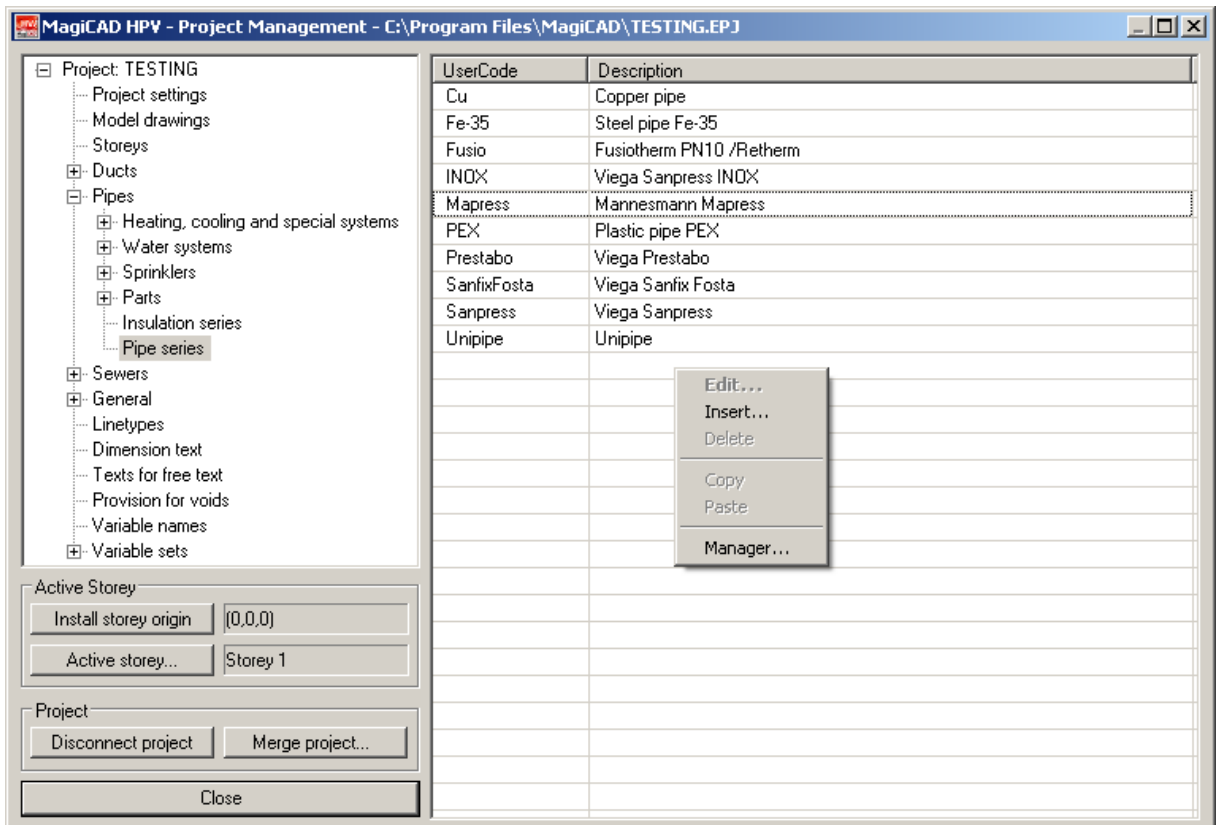


4. Change the source project file to LK Systems.EPJ.

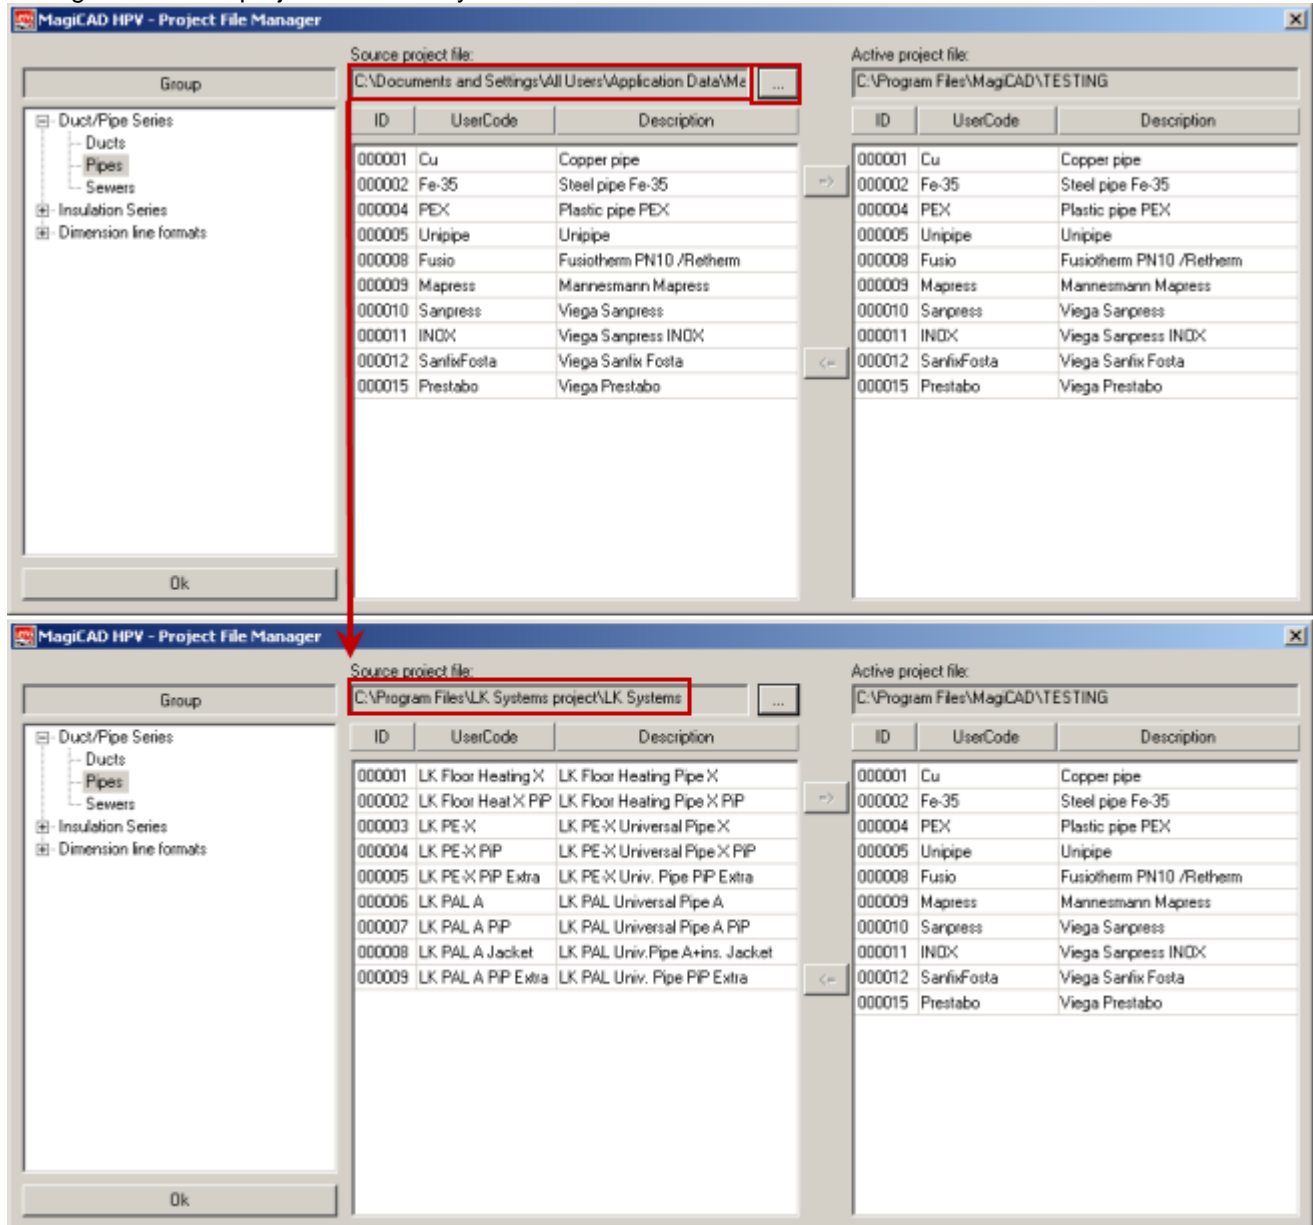

5. Choose needed pipe series (or all) and add it to your project file.

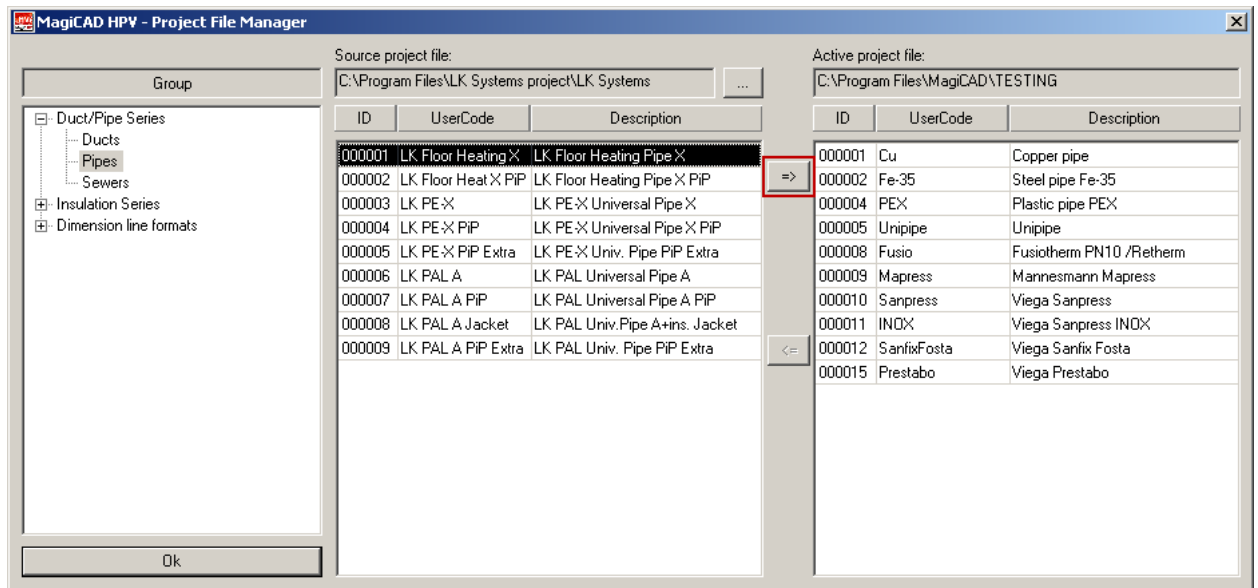

6. New LK Systems pipe series are added to the current project file and can be used in the drawing.

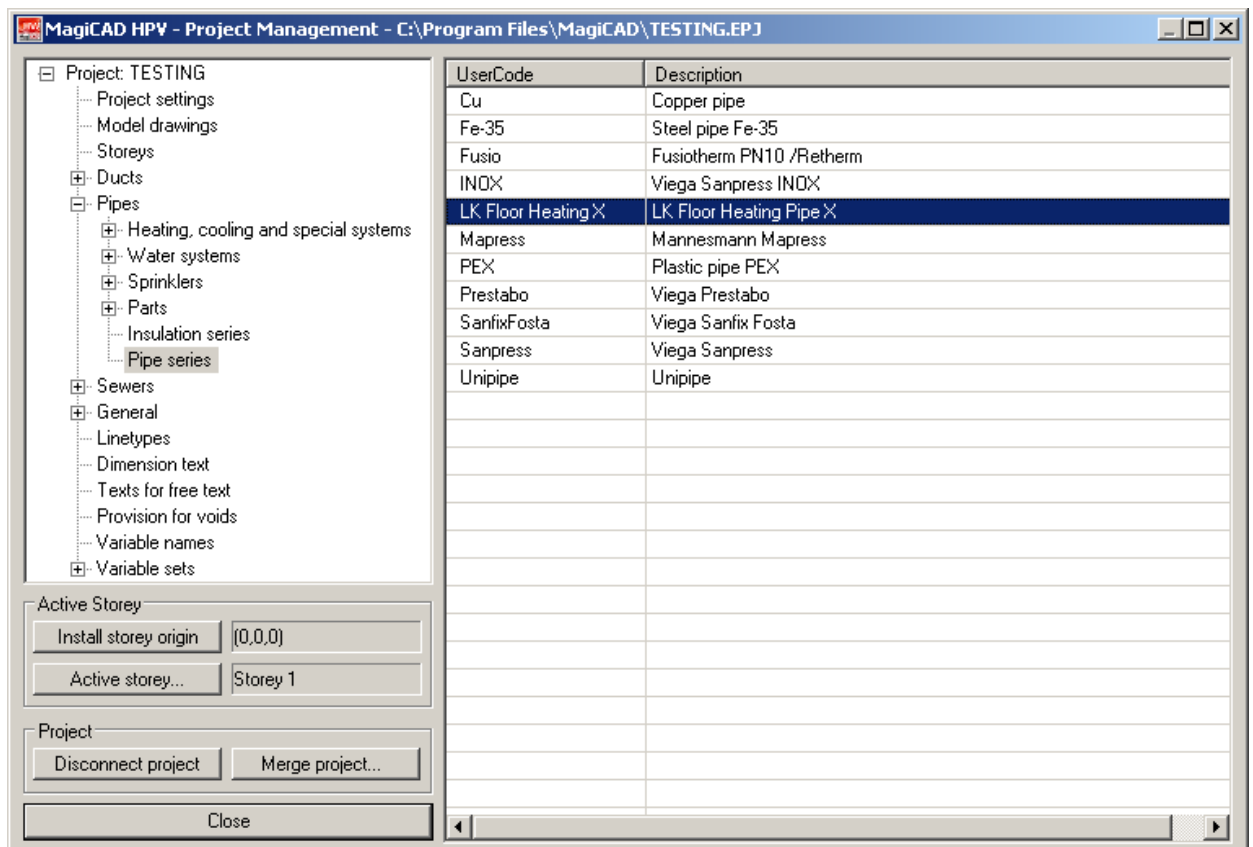

**MagiCAD HPV - Heating Pipe Options**

Supply Water

Series: LK Floor H LK Floor Heating Pipe X

Size: Fusio Fusiotherm PN10 /Retherm  
INOX Viega Sanpress INOX

Insulation: LK Floor H LK Floor Heating Pipe X

s [mm]: Mapress Mannesmann Mapress  
PEX Plastic pipe PEX  
Prestabo Viega Prestabo

User field1 of series:

Synchronize

Return Water

Series: LK Floor H LK Floor Heating Pipe X

Size: 8 Locked:

Insulation: -

s [mm]: 0

User field1 of series:

Status

Status: Not defined

Radius for flexible pipes

Do not use  Use 0.0


Routing

Smart  Direct

Pipe Positioning After Vertical

Smart (no crossing)

Pipe positioning from cursor pipe

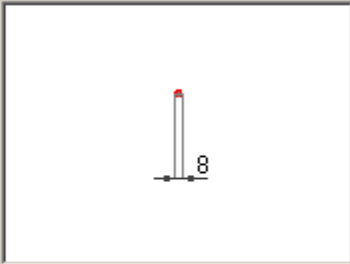

Top

Left  Right

Bottom

Distance [mm]: 100

Height Difference

90  45

dH in branch [mm]: 0

Ok Cancel