




BlazeMaster pipe series template instructions for MagiCAD for AutoCAD

13/11/2025


BlazeMaster pipe series template

Taking the template into use


1. Download the .zip file to your computer. Unzip the file to a suitable location.
2. Start MagiCAD, open the project management window, and choose *Pipe series* from the left part of the window.
3. Click the right button of your mouse and choose *Manager*.

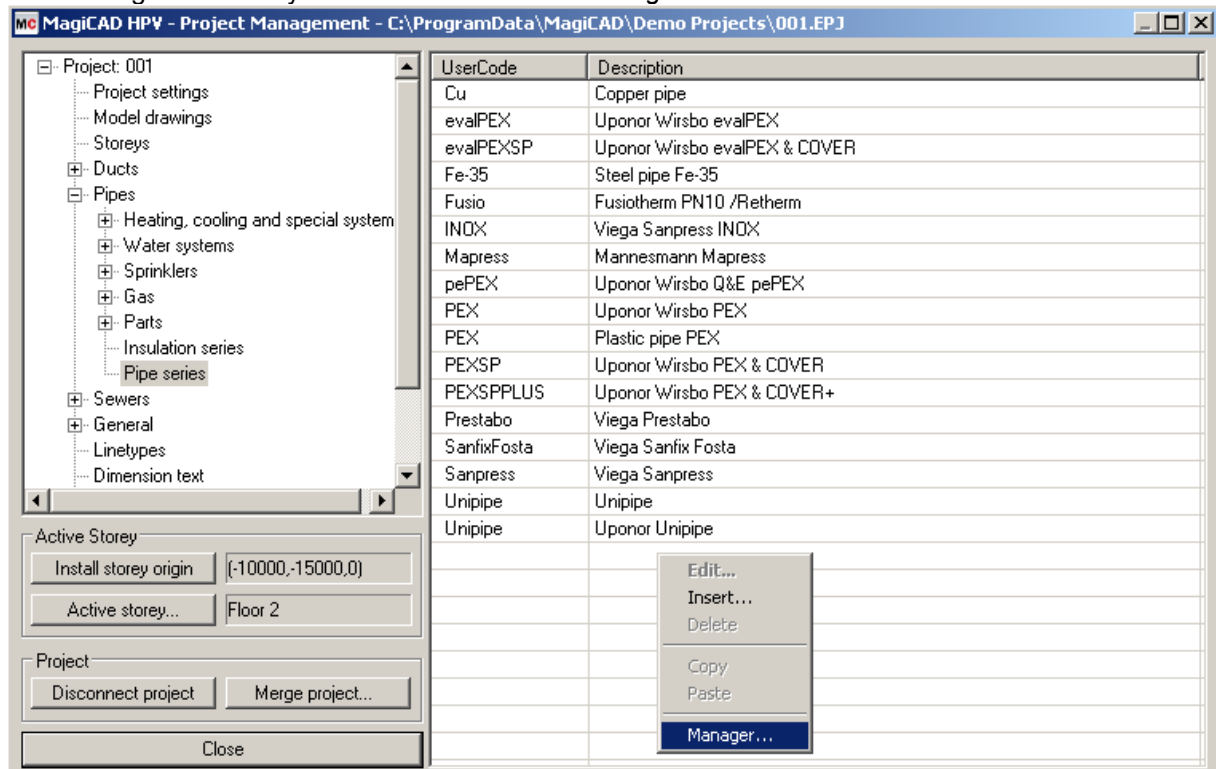


4. Change the source project file to BLAZEMASTER.EPJ.

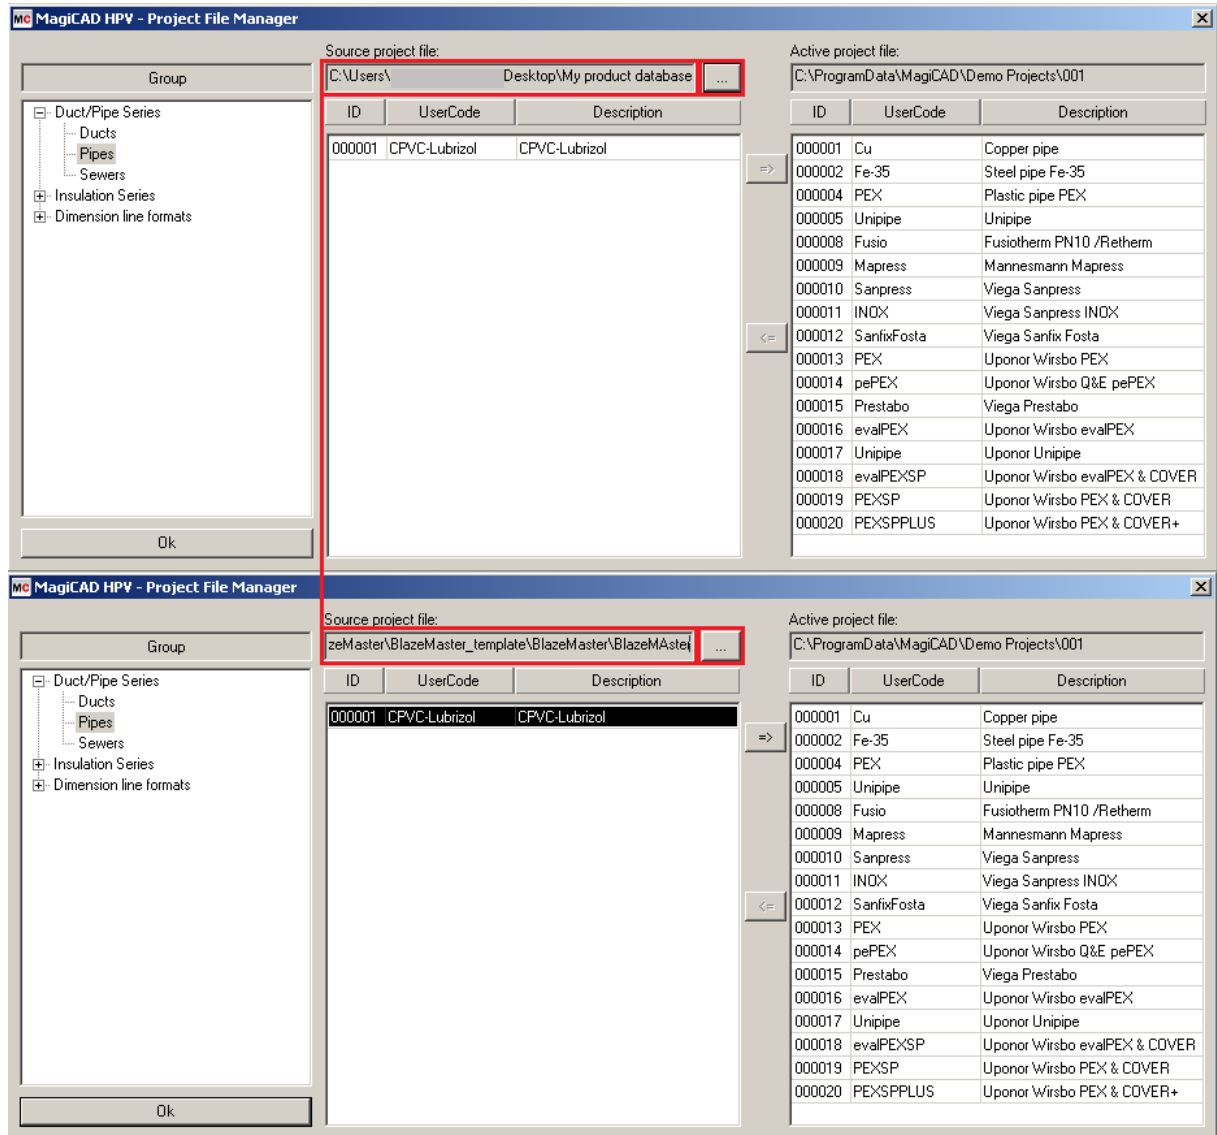

- Choose the pipe series and add it to your project file.

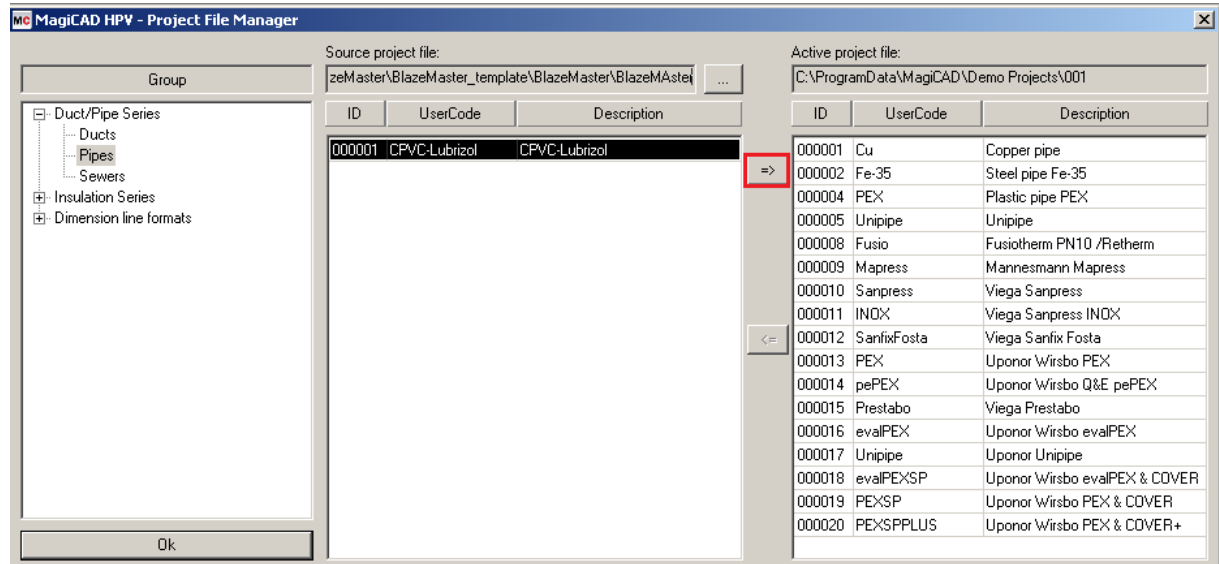

- New BlazeMaster pipe series are added to the current project file and can be used in the drawing.

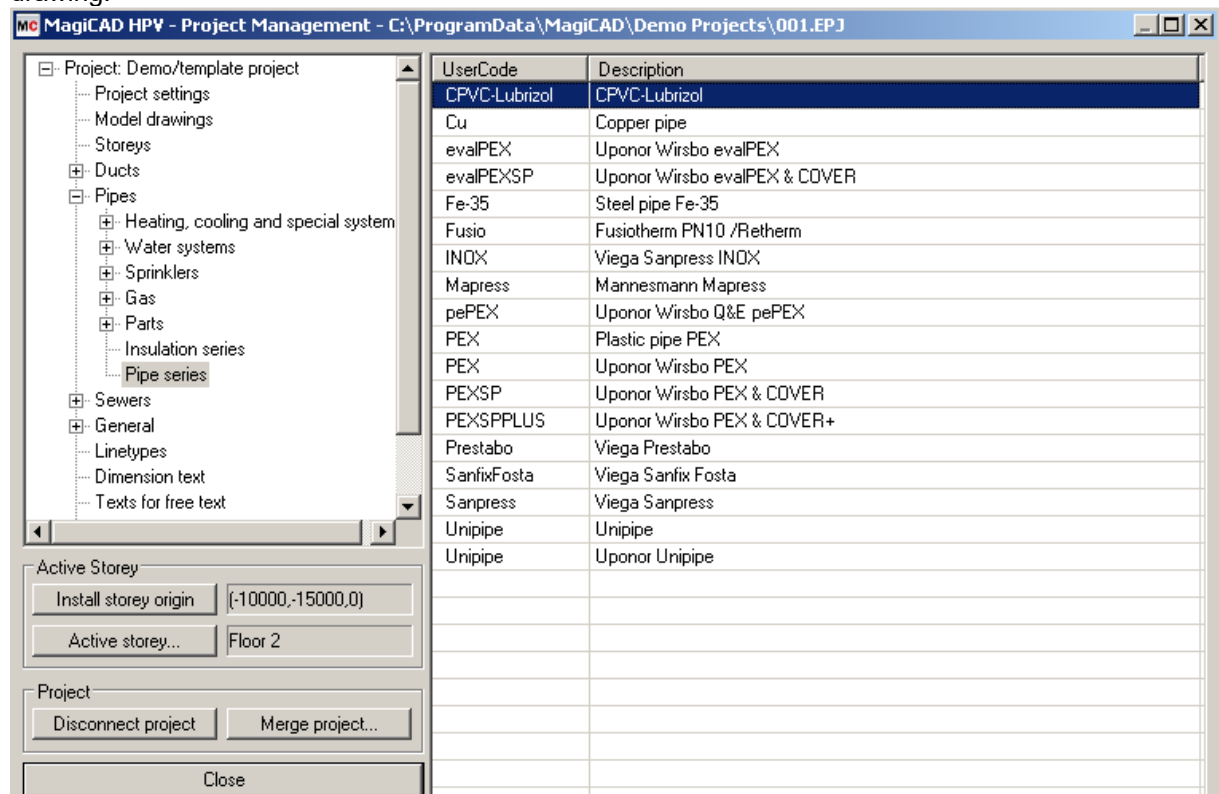

MC MagiCAD HPV - Sprinkler Pipe Options

General

Series:

Size:

Locked:

Insulation:

s [mm]:

Fe-35

User field1 of series:

Status

Status:

Radius for flexible pipes

☒ Do not use ☐ Use

Drawing

☐ Upward ☒ Downward

Fall [per mill]:

Routing

☒ Smart ☐ Direct

Alignment

☐ ☐ ☐ Horizontal extra offset

☐ ☒ ☐

☐ ☐ ☐

☐ ☐ ☐