



Adding Zetaesse pipe series to Revit project

User's Guide


Vilma Vaitiekaitiene | 2018-09-07

TAKING PIPE SERIES INTO USE

Download the .zip file from MagiCAD portal -> Databases
 (<https://portal.magicad.com/Download/GetProductCategoryList?categoryId=2>) to your computer. Unzip the file to a suitable location.


Open Revit/Revit MEP (earliest supported version is 2014) project, where you want to use Zetaesse pipe series. After that open the Zetaesse_pipe_series_imperial.rvt or Zetaesse_pipe_series_metric.rvt from downloaded file location. Activate 2D view from the target project.

In the target project click *Manage -> Transfer Project Standards*

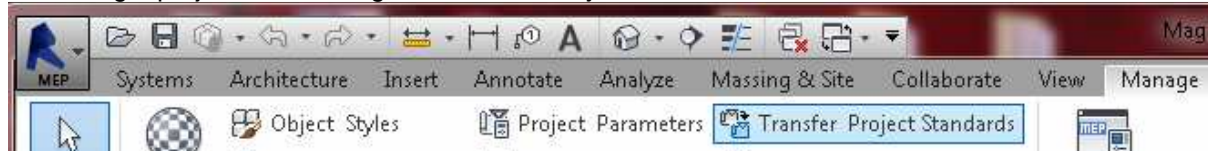


Opens *Select Item to Copy* window. In the *Copy from:* part select Zetaesse_pipe_series_metric.rvt (for pipe series in metric measurement system) or Zetaesse_pipe_series_imperial.rvt (for pipe series in imperial measurement system).


Check *Pipe types* in the list and click ok:

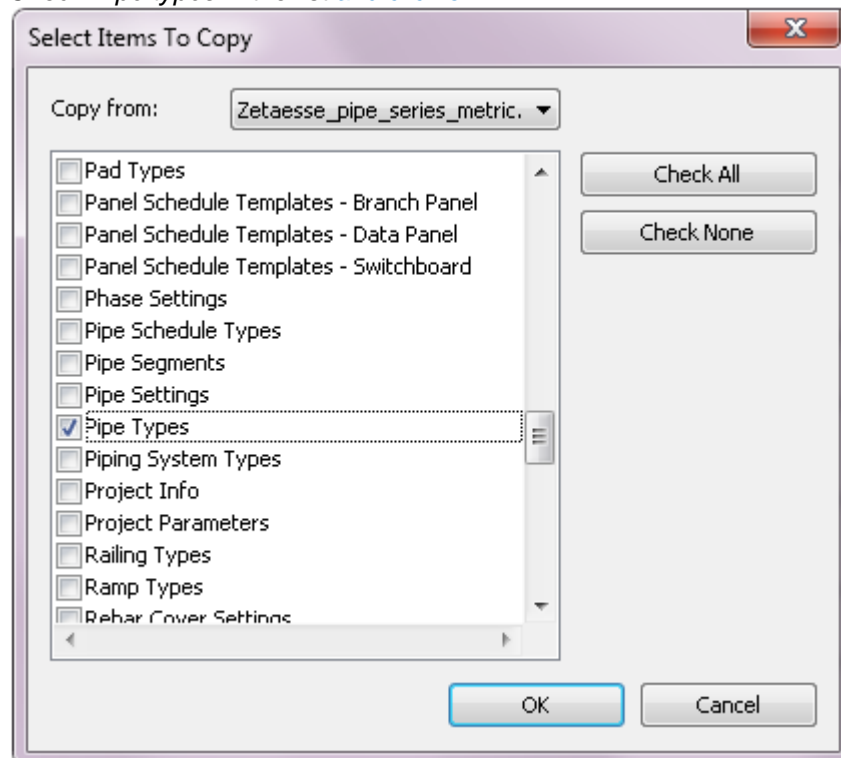


If duplicate types are found *Duplicate Types* window will open. Click *New Only*:

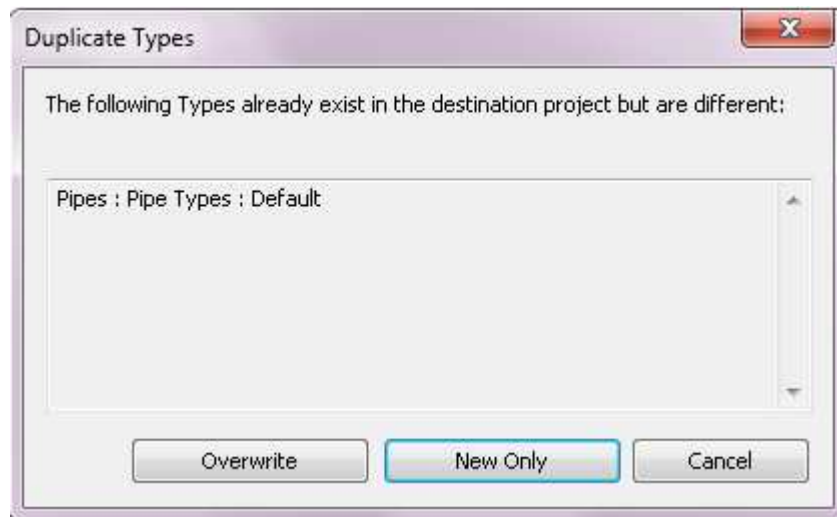

Pipe series are imported to the project. They are visible in *Families -> Pipes -> Pipe types*:

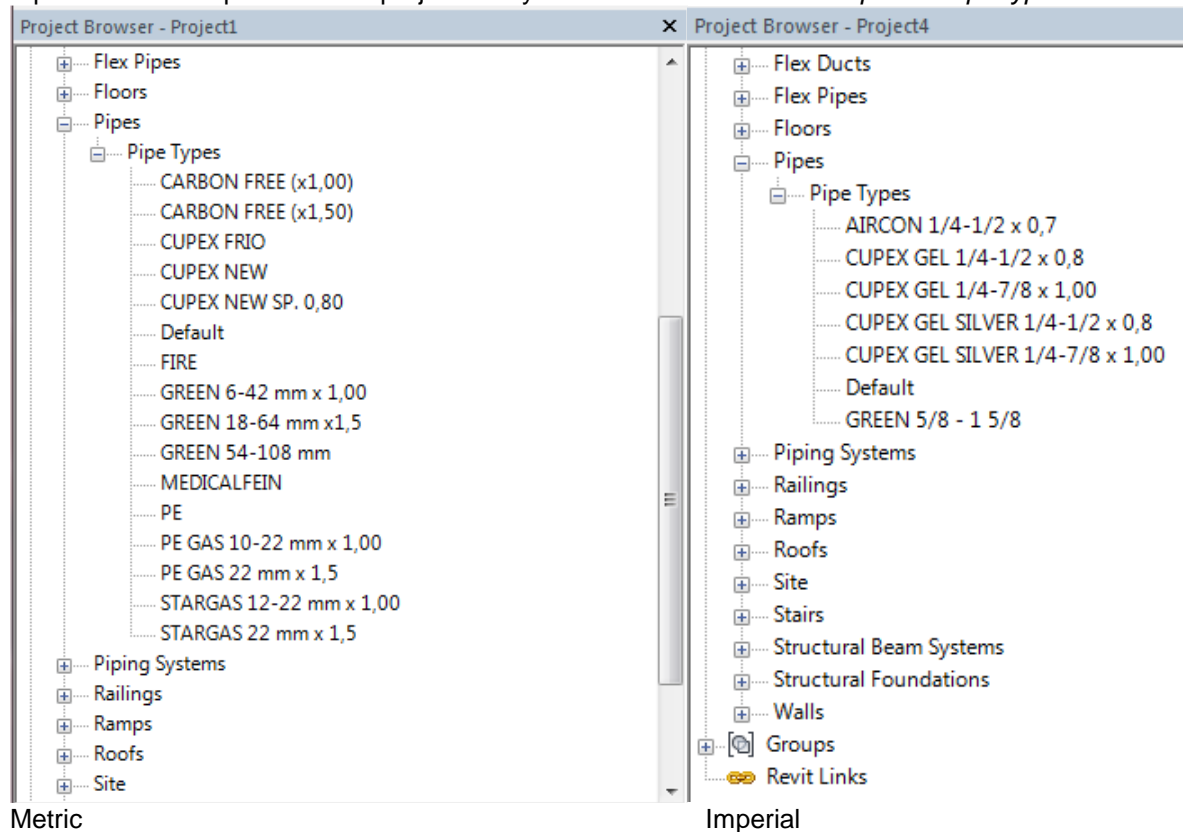

Now added pipe series can be used in the project:

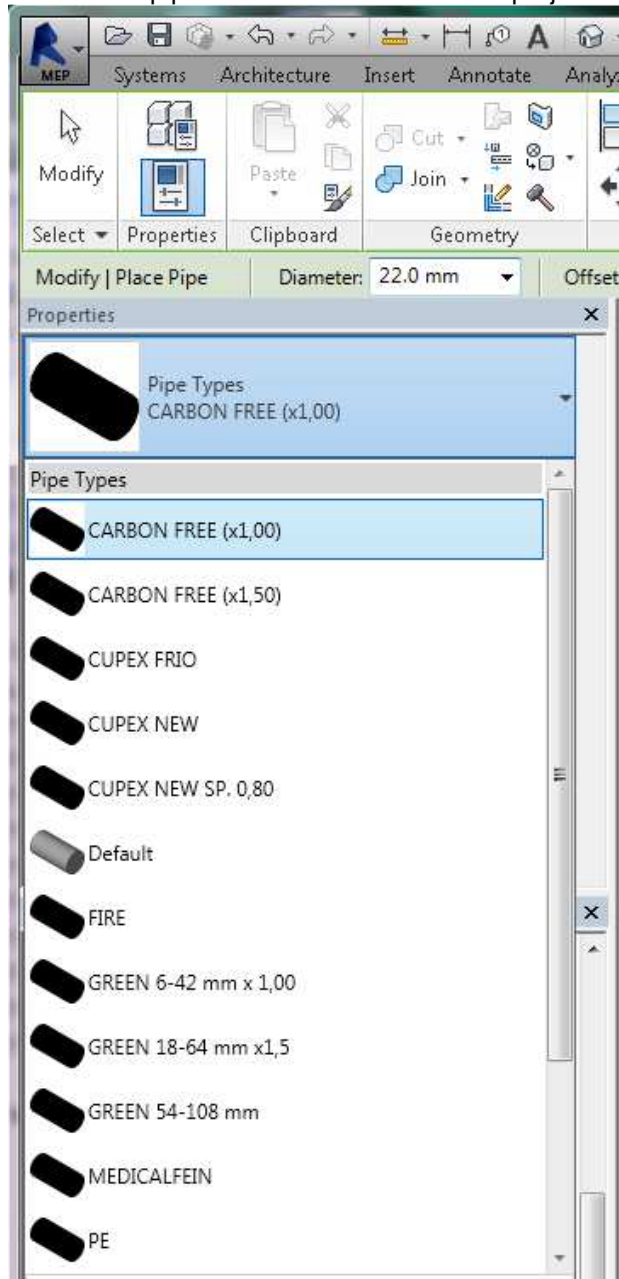

MagiCAD® Copyright © 1998-2018 Progman Oy. All rights reserved.
MagiCAD is a registered trademark of Progman Oy.
Revit MEP is a registered trademark of Autodesk Inc.
Windows is a registered trademark of Microsoft Corporation.
All other product names are trademarks of their respective holders.